


How to Assemble Sublimatable Clipboards

Sublimate the board prior to attaching the clip.

If using the standard clip, the clip must be in the open position for assembly. A zip tie can be used to hold the clip open (1).

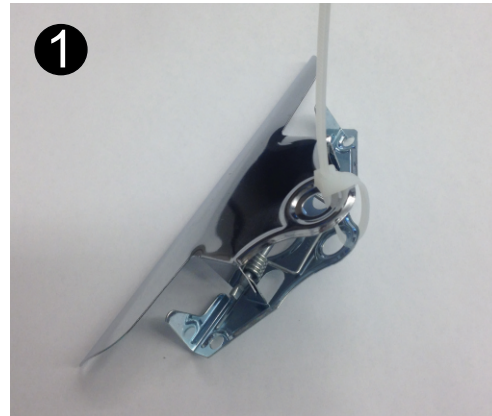

Insert the two male halves of the rivet through the back of the clipboard as shown (2).

Lay the clipboard face up on a flat, hard surface. Place the clip over the assembly holes and the female rivet half in position as shown (3).



Using a punch (or an upside down nail) and hammer, set each rivet with one or two firm blows until the clip is firmly secured (4). NOTE: the backside rivet may mark the surface on which you are working. Please take precautions.

